




Digital 6000

SK 6212


Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Πίκαοήje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

Update the firmware of the EM 6000 to v2.2 (or higher) in order for the SK 6212 to work properly. The latest firmware is available here: www.sennheiser.com/digital-6000


Battery

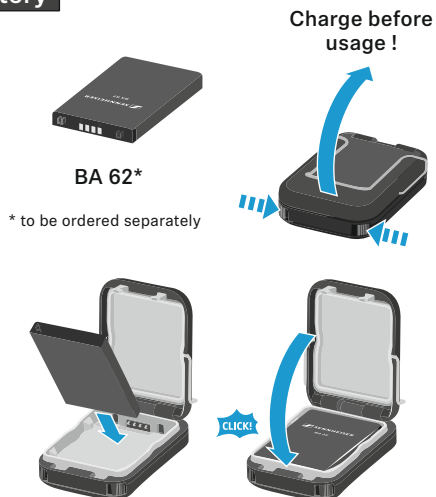

Setup

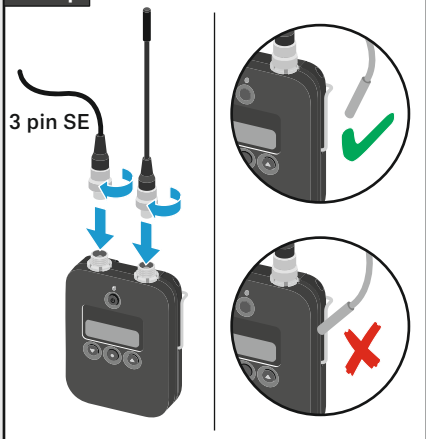

On/Off

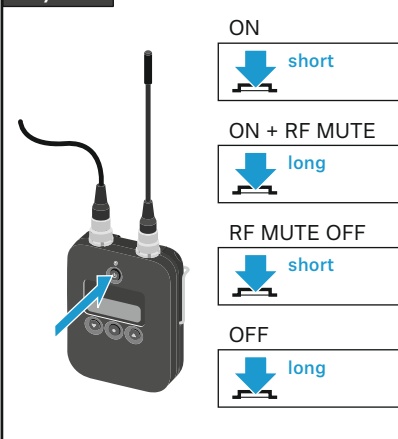


Sennheiser electronic SE & Co. KG


SENNHEISER

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 12/24 581342/A03

Operating elements

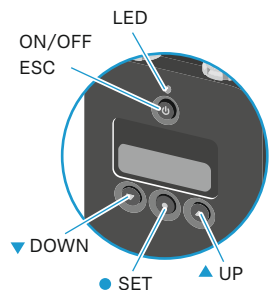

Home screens

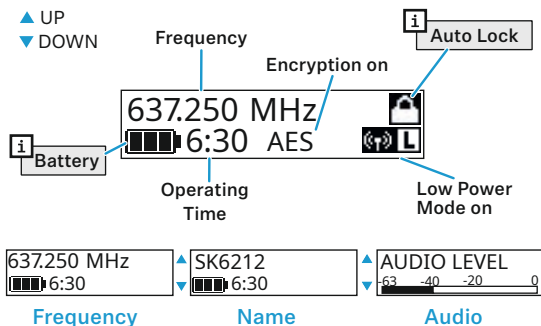


Menu

- Frequency
- Name
- Gain
- Low Cut
- Display
- Lock
- Test Tone
- Power LED
- RF Power
- Reset
- Device Info

LED Status



 ON,
Battery > 30 min
no AF Peak, no RF mute



ON,
Battery ≤ 30 min
no AF Peak, no RF mute



 
ON,
Battery > 30 min
AF Peak or RF mute active




ON,
Battery ≤ 30 min
AF Peak or RF mute active

Auto Lock

● ON




● ON

 

▲ UP
▼ DOWN




 ● SET



● SET

 Flashing



Digital 6000 System Instruction Manual



www.sennheiser.com/download